

NIKE C 14"



Echelon
COLLECTION

TERON
SERIES

76084

INSTALLATION

- 1] Remove any excess packing from the fixture.
- 2] If the lens is attached, remove the thumb screws that hold the lens trim in place, and remove the lens.
- 3] Center the fixture over the J-Box. Pull the fixture leads through the center hole. Secure the mount pan with the mounting screws provided, via the keyslots spaced around the mount pan, to the J-Box / Mounting Surface.
- 4] Connect the fixture leads to the supply leads. TLI stipulates the Black as Line; White as Common; Bare/Green as Ground.

- 5] Check the re-lamp label to ensure that the lamp is the specified wattage. Fluorecent lamps will not snap into incorrect lampholders.


MAINTENANCE

The lens should be cleaned once every 6 months. Repeat the above procedures in reverse to remove the lens. It must be washed in a mild soap solution. DO NOT use cleansers containing bleach. Re-assemble the fixture.

The metal portion of the fixture can be wiped clean as needed using a mild soap solution.

ATTENTION: Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair.

NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

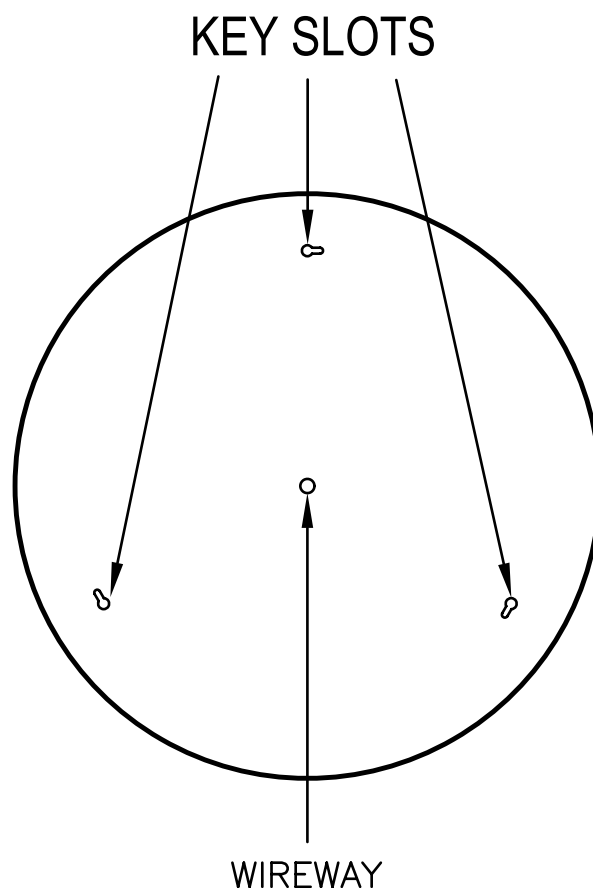

These instructions are general to the fixtures noted.
Due to the numerous options, all variations may not be covered.

Installation of an electrical luminaire must be performed by a qualified professional. The fixture must be wired in accordance to all local & national electrical codes.