



INSTALLATION & MAINTENANCE INSTRUCTIONS FOR

ALLEGRO W - LED

OUTDOOR SERIES
Wall Mounted Luminaire P.N.:76109 REV.1

NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE LOCAL & NATIONAL ELECTRICAL CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND FAMILIAR WITH THE OPERATION OF THE PRODUCT AND HAZARDS INVOLVED.

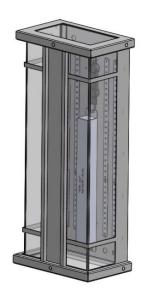

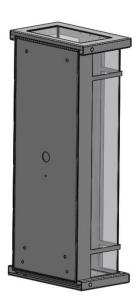


INSTALLATION


- 1. Make sure the power to the area working in is shut off to avoid serious injury from shock.
- 2. Remove any excess packing from the fixture.
- 3. The Allegro W is designed to be mounted directly to the wall by using (4) 1/4" anchor bolts (not included), and the bolt pattern shown at the right.
- 4. Open the housing assembly by removing the (4) 8-32 x 5/16" pan head screws located on both sides of the fixture.
- 5. Remove the (2)8-32 x 1/4" nuts holding the LED assembly plate to the mounting plate to access the mounting holes.
- 6. Line up the back of the mounting plate in desired location, completely covering the junction box and mount securely to the wall with 4 suitable fasteners supplied by the customer.
- 7. Complete the wiring to the power source and ground. The black as line; white as common; bare/green as ground. Wire connections to be made inside of housing.
- 8. Reassemble the LED assembly plate back on to the mounting plate with the (2) 8-32 x 1/4" nuts.
- 9. Reassemble the housing to the mount with the (4) 8-32 X 5/16" pan head screws.
- 10. Outdoor wall fixtures must be caulked with a suitable, waterproof sealant across the top and at least "half way" down each side of the fixture to properly seal it to the mounting surface. A small space should be open at the bottom for excess moisture runoff.

MAINTENANCE

The fixture can be wiped clean as needed using a mild soap solution.

ATTENTION: Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair.

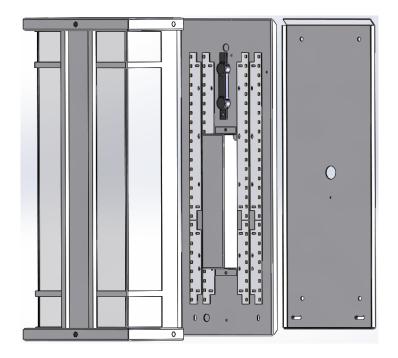

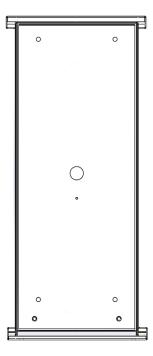

WIRING DIAGRAM

