



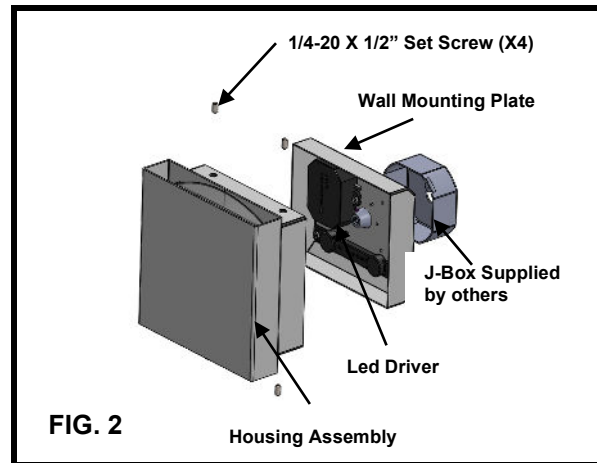

INSTALLATION & MAINTENANCE INSTRUCTIONS FOR THE **CONCERTO UDL – WET LOCATION** Wall Mounted Luminaire P.N.:76181 REV1

WARNING: DISCONNECT POWER PRIOR TO INSTALLATION OR SERVICING OF FIXTURE

NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE LOCAL & NATIONAL ELECTRICAL CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND FAMILIAR WITH THE OPERATION OF THE PRODUCT AND HAZARDS INVOLVED. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

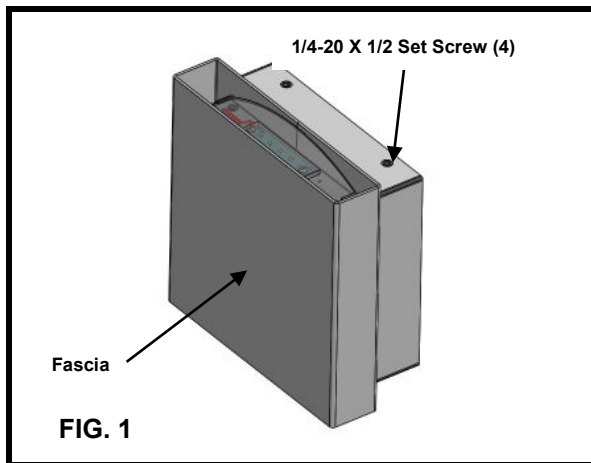

INSTALLATION

1. Remove any excess packing from the fixture.
2. Remove the Housing Assembly from wall mounting plate (in Figure 2) by loosening the (4) 1/4-20 X 5/8 Allen Screws. See (Figure 1)
3. Pull the supply leads through the center hole/rubber bushing in the Wall Mounting Plate.
4. Attach the Wall Mounting Plate to junction box using (2) #8-32 X 1.00 PH screws (**AT A MINIMUM HEIGHT 4FT ABOVE THE GROUND**).
Note: If LED driver interferes with junction box mounting holes because of j-box orientation, re-position driver to opposite side of the compartment to expose mounting holes.
5. Connect the fixture leads to the supply leads. Teron stipulates the Black as Line, White as Common, and Bare/Green as ground.
6. Reassemble fixture by reattaching the Housing Assembly to the Wall Mounting Plate and securing the assembly in place with (4) 1/4-20 x 1/2 Allen Screws
7. Outdoor wall fixtures **must be caulked with a suitable waterproof sealant** across the top, and at least "halfway" down each side of the fixture to properly seal it to the mounting surface. Fill rough or uneven surfaces, mortar joints and holes with sealant. A small space should be open at the bottom for excess moisture runoff.

NOTICE:


Failure to properly caulk around perimeter of the mounting plate or pan on an outdoor fixture when mounted to a wall or ceiling, could lead to water and /or electrical damage and is not covered under the warranty.

MAINTENANCE

DO NOT use cleansers containing bleach.


The metal portion of the fixture can be wiped clean as needed using a mild soap solution.

ATTENTION: Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair it.

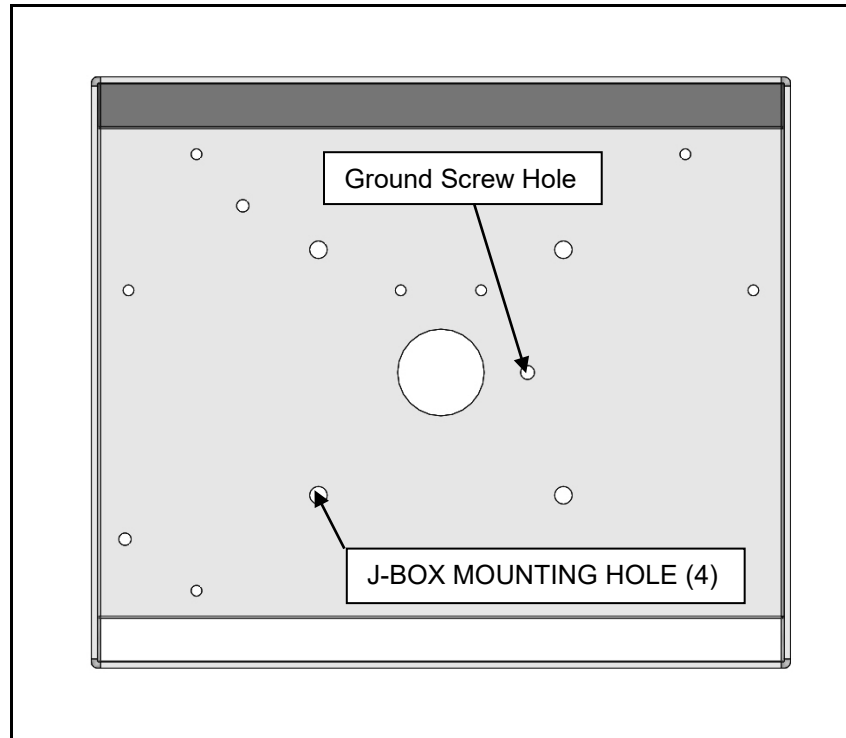

NOTE: Fixture is to be mounted to the junction box using 8-32 x 1.00 screws

WIRING DIAGRAM

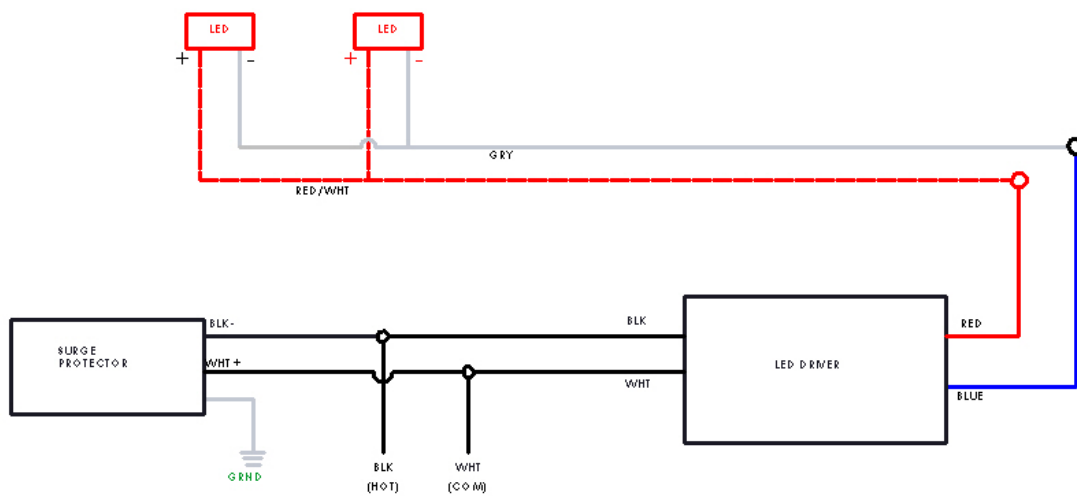

WIRING DIAGRAM WITH SURGE PROTECTOR