


INSTALLATION & MAINTENANCE INSTRUCTIONS FOR THE Capri 3FT - LED Wall Mounted Luminaire 76190


WARNING: DISCONNECT POWER PRIOR TO INSTALLATION OR SERVICING OF FIXTURE


NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE LOCAL & NATIONAL ELECTRICAL CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND FAMILIAR WITH THE OPERATION OF THE PRODUCT AND HAZARDS INVOLVED.

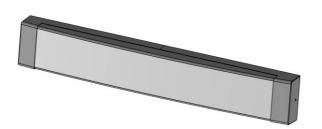

INSTALLATION

- 1. Remove any excess packing from the fixture.
- Remove frame (1) in Figure 1 and lens (2) in Figure 1 by taking off the 2 screws (3) in Figure 1 on the ends of the fixture.
- 3. Take off LED mounting plate (5) in Figure 1 by removing the 4 screws (6) in Figure 1.
- 4. Capri housings (4) in Figure 1 are designed to be mounted directly to the wall with 4 anchors (By Others). There are 4 mounting holes in housing.
- 5. Verify housing mounting holes match pattern before drilling into wall shown, refer to the mounting hole figure on second page. Also make sure that the

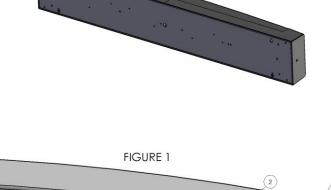

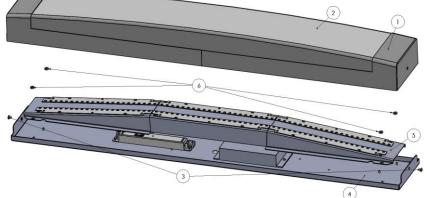


- second page. Also make sure that the fixture will cover the junction box appropriately when mounted.
- 6. Pull the supply leads into the housing, and mount the housing to the wall anchors.
- 7. Connect the fixture leads to the supply leads. Teron stipulates the Black as Line, White as Common, and Bare/Green as ground.
- 8. Reassemble fixture by reattaching LED mounting plate and lens assembly, securing them with removed hardware.

MAINTENANCE

The lens should be cleaned once every 6 months. Repeat the above procedures in reverse to remove the lens. It must be washed in a mild soap solution.

DO NOT use cleansers containing bleach. Re-assemble the fixture.

The metal portion of the fixture can be wiped clean as needed using a mild soap solution. **ATTENTION**: Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair.

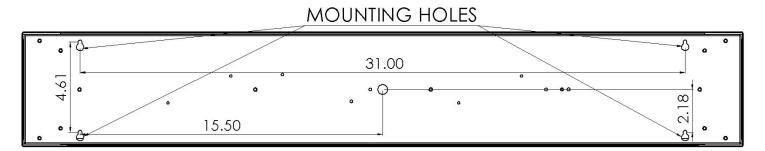

Note: Measurements vary depending on size, location of mounting holes does not

