



INSTALLATION & MAINTENANCE INSTRUCTIONS
FOR THE
HOLLYWOOD PARK SCONCE - LED
Ceiling Mounted Luminaire P.N.:76169 REV. 1

WARNING: DISCONNECT POWER PRIOR TO INSTALLATION OR SERVICING OF FIXTURE

NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE LOCAL & NATIONAL ELECTRICAL CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND FAMILIAR WITH THE OPERATION OF THE PRODUCT AND HAZARDS INVOLVED.

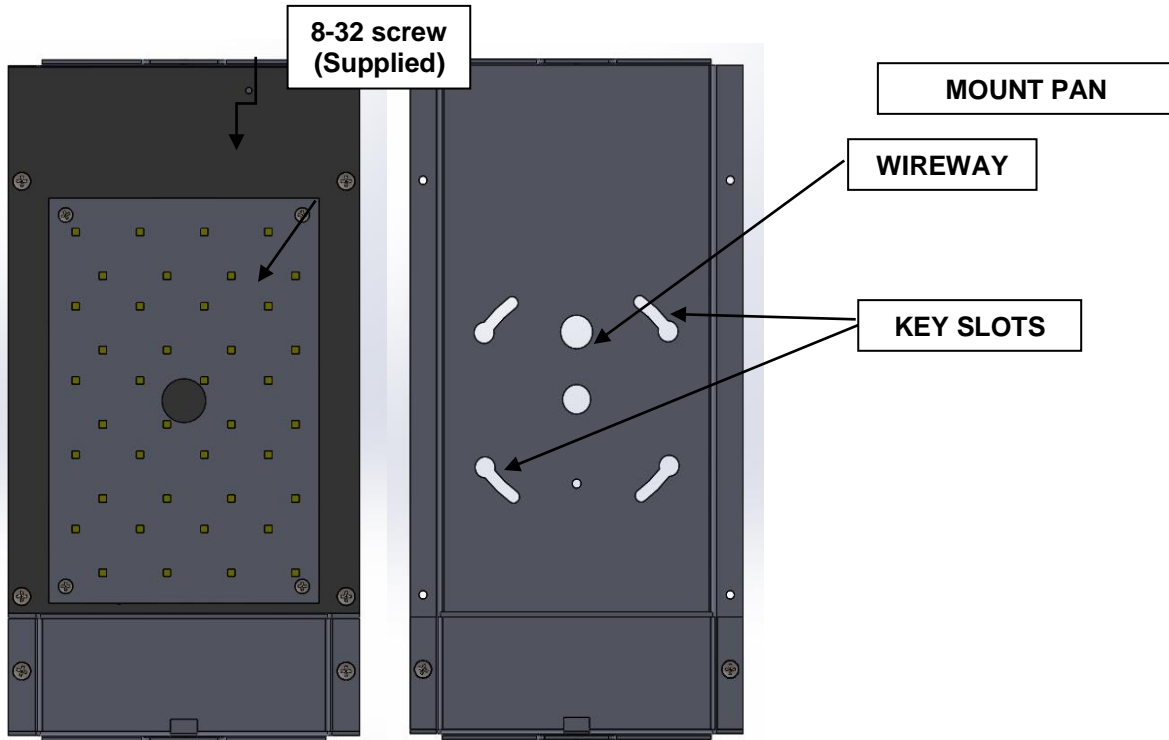


FIG. 1

FIG. 2

INSTALLATION

1. Remove any excess packing from the fixture.
2. Remove the screws mounting the lens to the mount pan assembly.
3. Remove the reflector assembly by removing the screws that mount the reflector to the mount pan.
4. Connect the fixture leads to the supply line leads. TLI stipulates the BLACK lead as line voltage, WHITE lead as common and BARE/GREEN lead as ground.
5. Place the mount pan over the (2) J-box screws via the Key slots (FIG. 2). Rotate the mount pan to secure it in the Key slots, and then tighten the screws to completely secure the pan to the J-Box/Mounting Surface.
6. Reassemble the fixture following steps 5-2 backward.
7. Restore the power to the circuit.

MAINTENANCE:


DO NOT use cleansers containing bleach.

The metal portion of the fixture can be wiped clean as needed using a mild soap solution.

ATTENTION:

Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair.

NOTE: Fixture is to be mounted to the junction box using 8-32 x .75 screws

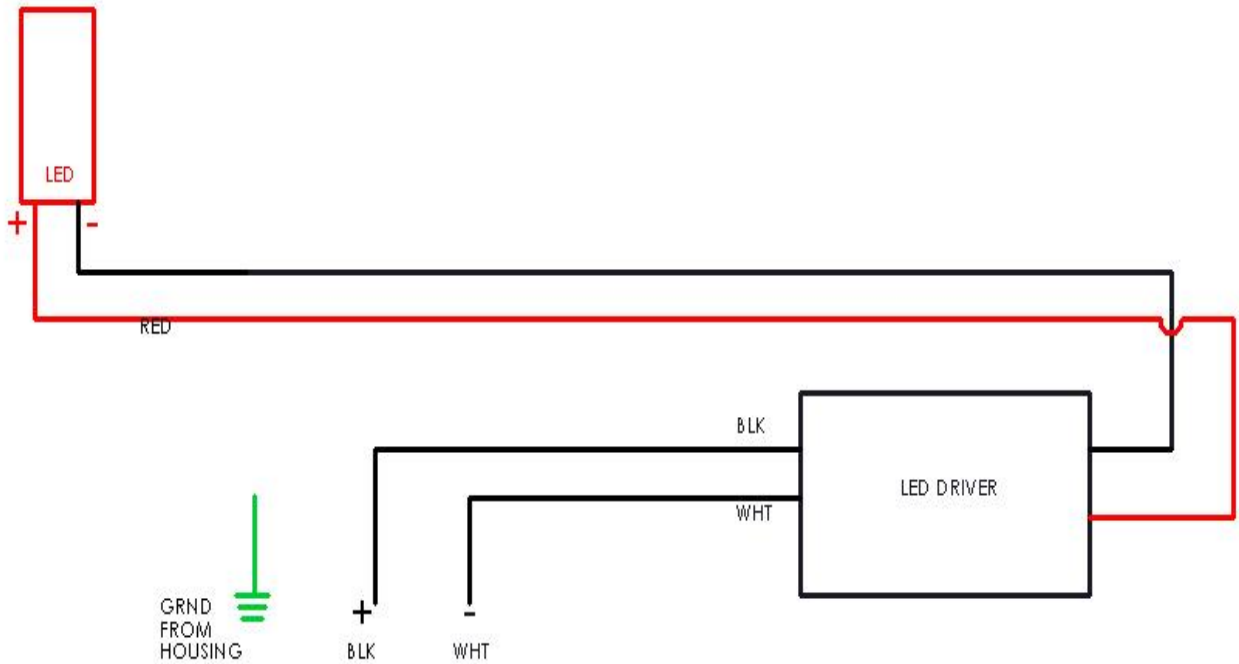

ONE DRIVER ONE MODULE WIRING DIAGRAM