TLI
TERON LIGHTING

WARNING: DISCONNECT POWER PRIOR TO INSTALLATION OR SERVICING OF FIXTURE

NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE LOCAL & NATIONAL ELECTRICAL CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND FAMILIAR WITH THE OPERATION OF THE PRODUCT AND HAZARDS INVOLVED.

MOUNTING HOLES
4 TYP.

ITEM 1

ITEM 3

ITEM 2
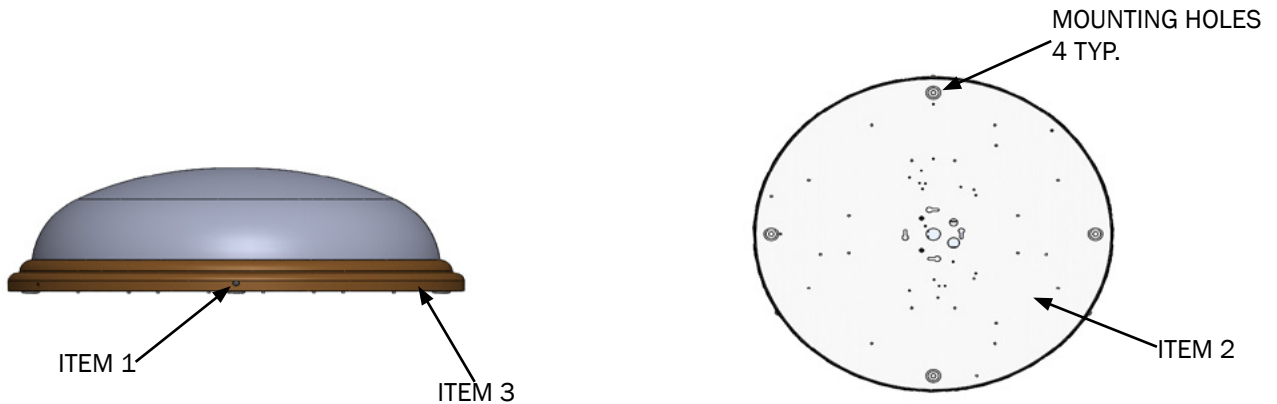
INSTALLATION
1. Make sure the power to the area working in is shut off to avoid serious injury from electrical shock.
2. Remove any excess packing from the fixture.
3. The Fusion Series is designed to be mounted directly to the wall using No. 8 wall anchors and No.8 Flat washers.
4. Remove (3) 8-32 X 1/2 Trim Screws (Item 1) around circumference, to remove Trim Ring/Lens (Item 2) from Mounting Pan (Item 3). Set Lens Assembly aside for re-installation.
5. To access components, remove (2) 8-32 Keps Nuts from Ballast cover (Item 4) (Not shown). Set aside for re-installation.
6. Drill (4) holes for anchor bolts, using (4) outward holes in mounting pan as a template and junction box as a center point.
7. Connect the fixture leads to the supply leads. Teron stipulates the Black as Line; White as Common; Bare or Green as Ground.
8. Secure Mounting Pan (Item 2) to wall with Wall Anchor Screws (Not provide). Verify alignment of holes.
9. Re-install Ballast Cover (Item 4 not shown) with hex nuts.
10. Attach Trim and Diffuser assembly (Item 2) as shown, by inserting the pin into keyhole slot in mounting pan and turning the assembly slightly to align screw holes.
11. Secure Lens/Trim with (3) No. 8-32 X 1/2 Trim Screws and tighten.
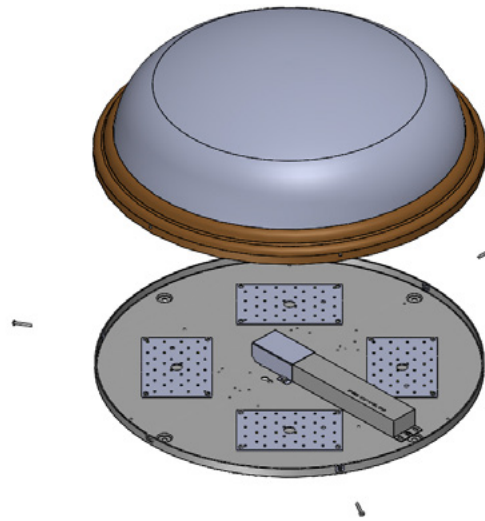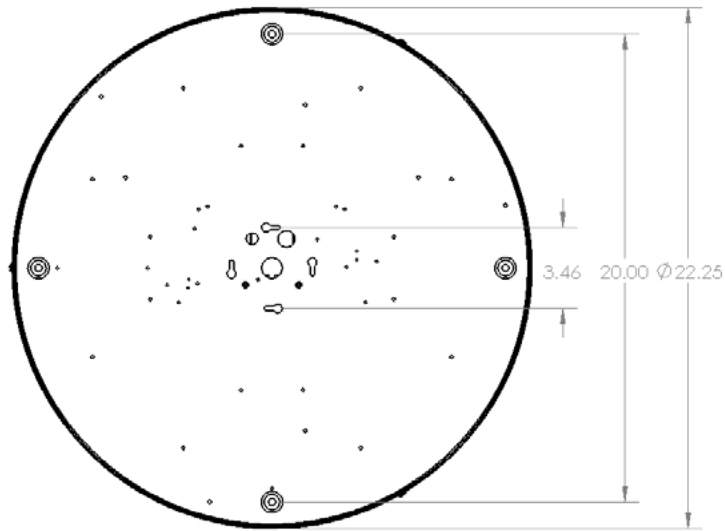12. Restore power to circuit.

MAINTENANCE
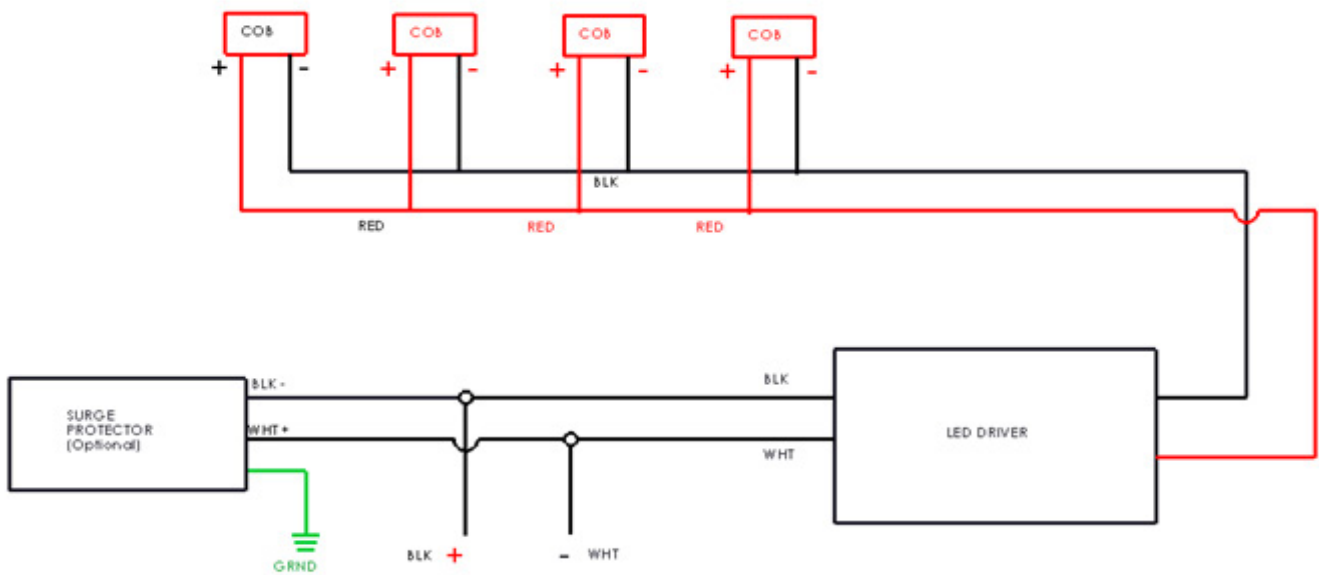DO NOT use cleansers containing bleach.
The metal portion of the fixture can be wiped clean as needed using a mild soap solution.

ATTENTION
Avoid moving any exposed wires. If any wires are accidentally disconnected, call a professional to repair.

WIRING DIAGRAM

Note: Wiring diagram from 2014

SURGE SURPPRESSOR CELL ONLY